

Projector 18

Special Manual for Projector and HDMI Dongle

Parts



Projector



Remote



AV Cable



Power Supply



Manufacturer's Projector Manual



USB Wifi Receiver

HDMI Dongle



Manufacturer's HDMI Receiver

Controls

Front of Projector



Projector Connectors



Focus Adjustor

Power Supply



USB Power Supply

Note: less bright then with Power Supply

This manual covers only how to connect the projector to a smart Phone all other connections see

www.funspark.com/projector-18/

WARNING:

NEVER RUN PROJECTOR UNATTENDED. NEVER COVER THE PROJECTOR WITH ANYTHING WHEN RUNNING AS IT COULD CATCH FIRE IF COVERED!

IMPORTANT: Follow assembly exactly

SETUP Part 1 - Connecting Wires: FOLLOW EXACT SEQUENCE

1. Select location for Projector
Connection to power
Projector directed to white wall,
cloth etc.
The smoother
the surface the better
the image

2. **Follow these steps exactly. Otherwise you will not be able to plug in the HDMI Dongle**



Setup Part 2 - Starting up Projector

1. Add batteries to the remote control
2. Have Projector setup and connected as in page 2
3. Press "POWER" button
4. Projector takes a moment to boot up
5. "LED Projector" will be displayed first then blue screen with different items will display
6. Press "Select Input" button
7. Select "HDMI" then click "OK"
8. Now you will see different information. Needed information displayed on the top and should be this:
SSID: Yehua-4C54DE (Wifi Name) PSK: 12345678 (default password)

Setup Part 3 - Project Image

iPhone and iPads

1. Connect to Wifi
Name: **Yehua-4C54DE**
PW **12345678**
2. Find AirPlay



3. Turn AirPlay on
4. Select **Yehua-4C54DE**

Note: due to the many brands and their versions, operating systems and changes throughout the years, we cannot guarantee it works with every device and cannot show you how to make it work for all the different devices. If you cannot make it work Google it or find a friend who is more experienced with your device. Older Version will not work.

Extra

AV Cable - used video recorders etc. (connect cable > press button "Select Input" select AV)

USB thumb drive - load images or videos onto drive (mp4 files are supported) > plug it in > press "Select Input" button select USB > follow next screen directions)

Micro SD Card - same as USB thumb drive

Charging: you can also use a really large power bank or phone charger to charge the projector. Plug it into the plug at the back (see page 2 USB POWER SUPPLY).

Android

1. Connect to Wifi
Name: **Yehua-4C54DE**
PW **12345678**
2. Pull down "Settings" from top
3. Pull more down to get all settings
4. Find the Screen Mirror
5. Select **Yehua-4C54DE**

Please note: Androids interface is different from brand to brand. If you can't make it work, Google it or download the app MiraCast

Mac, Windows etc.

1. Connect HDMI Cable to Projector
2. Select Display Settings
3. Extend or duplicate Screen

Please note: Macs, Windows, Chrome Books, Linux - all have different versions and select display settings are handled differently, if you can't find it Google this: "(Your system name) how to change display settings"