



Jazzminton[®]

SPORT



Content List
Assembly Instructions
Training Tips
Rules & More

Manuals



Safe for Indoors



Fits in any House



Play at Park




Front Yard



Office



Beach

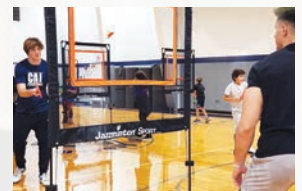

Gym



Living Room



Anywhere!

Patents Pending

Contents

Jazzminton Sport “Net”



Frame



Top Bar



Net



Green Paddle



Orange Paddle

ONLY for Windy Conditions



2 Anchor Ropes



2 Net Hooks




holds in the wind



Red Court Rope



4 Court Hooks

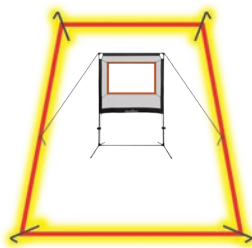

to make a court




Carry Bag

CONTENTS

Birdies and Balls

Distance Birdies and Balls Travel, with our patented Dynamic Brake™

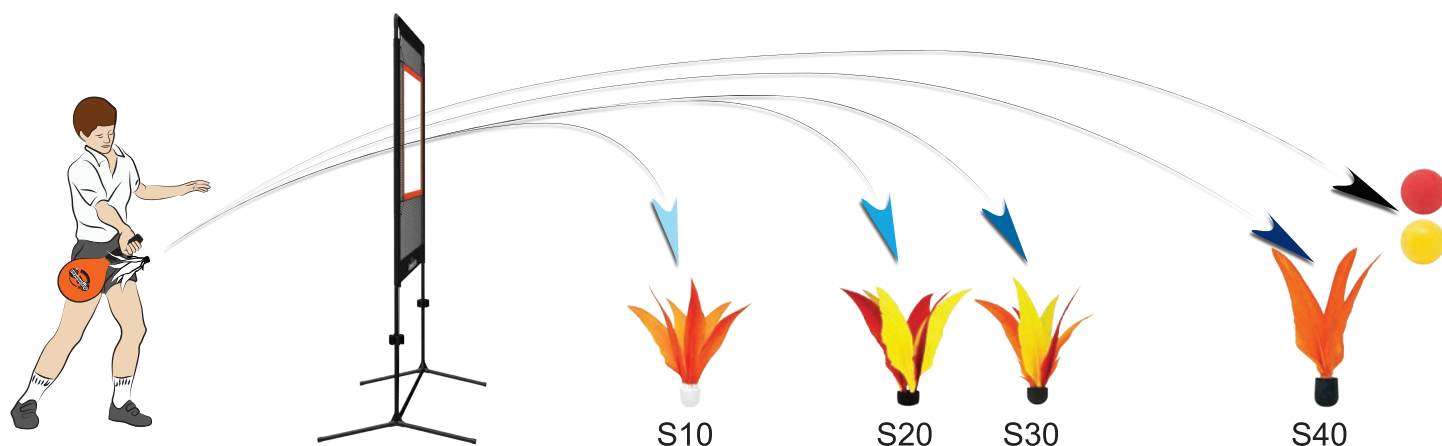

Why are there so many different birdies and balls?

1. Enables comfortable indoor and outdoor play
2. Allows you to choose your preference in speed of play



2 Standard Birdies

S10

orange
white tip



2 Sport Birdies

S20

yellow, red
short black tip



2 Tournament Birdies

S30

yellow, red, orange
medium black tip



2 Sport Wind Birdies

S40

orange
large black tip

Packed in Birdie Case



Note:

Insert all birdies tip-first into the tube
simultaneously, not one by one.



2 Yellow Low Bounce Balls



2 Red High Bounce Balls

How to Assemble

First Time: Approx. 5-10 minutes
After 3-5 Times: 1 minute

Watch assembly video

funsparks.com/jazzminton-sport-how-to-assemble



Remove from Carry Bag: Frame - Top Bar - Net.




Unfold the Frame tubes from the two Foam Holders. (Foam Holders **stay** on Frame)



Plug tubes together - they are connected with bungee ropes for simplicity.



Make sure legs are fully pushed in (Note: the fit is tight to ensure the frame is stable)

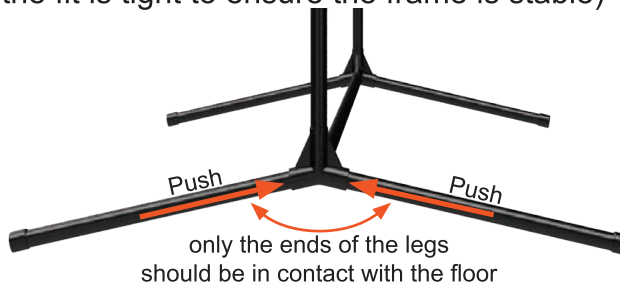

Place the Net between the Frame like this, ensuring the word "Jazzminton" matches image.




Slide the Net over the two tubes.




Remove one 2-Way-Connector from the Top Bar.




Slide the Top Bar through the top sleeve of the Net.

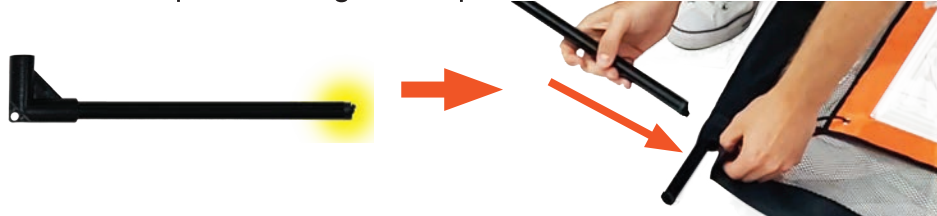


Place the 2-Way-Connector back onto the Top Bar.

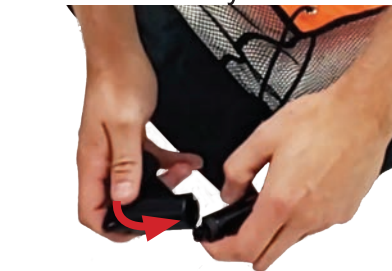

Connect the 2-Way-Connector to the Frame.

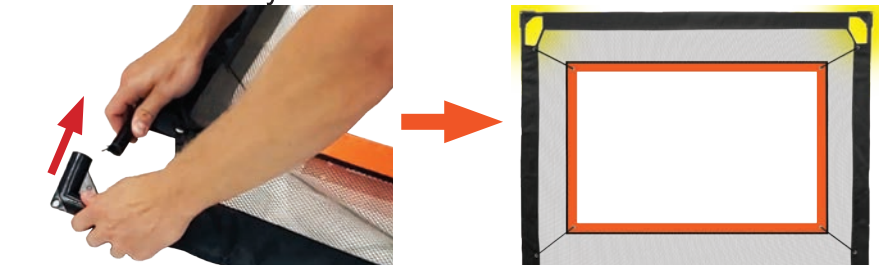

Attach the two bungee cords to the eyelets at the bottom of the Net. This is to stretch out the Net.

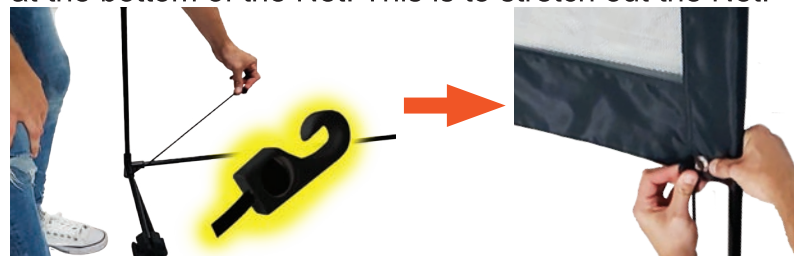

Fully assembled




Setup

Minimum space needed: 8 x 18 feet - (2.40 x 5.50m)

Standard Setup: (indoors and outdoors without wind)



Jazzminton Sport is best played using the S10, S20 or S30 Birdie. The reason for this is because every hit, no matter how hard, CAN be returned. The S10, S20 and S30 are designed to slow down as it flies, allowing you time to react in order to return it. Since this is the case, there are no boundary lines needed, making for awesome rallies. Choose the birdie you prefer.

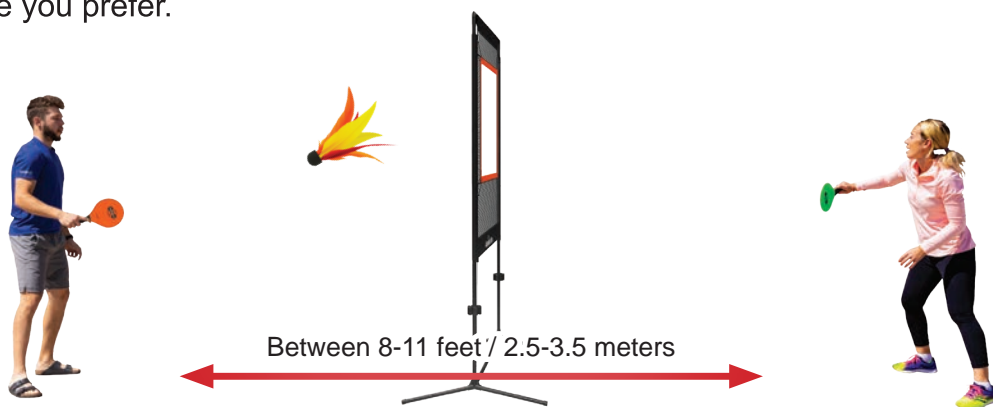


Windy Conditions Setup


If it is windy, we have also provided Sport Wind Birdies and Yellow/Red Balls to play with. In this case, we suggest you set up the boundary line, because hitting the Sport Wind Birdies or Yellow/Red Balls as hard as you can, is difficult to return. These boundaries limit the distance of your shot, so you don't just blast it away, making for great rallies.

Alternative Setup (ONLY for windy conditions)

Use the Anchor Rope and the Anchor Hooks to secure down.

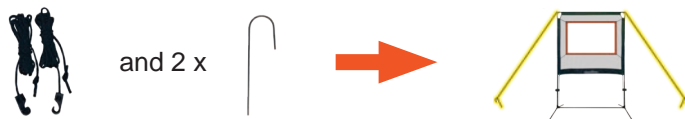

Set up boundaries so each player has a court size of 16' x 16' (4.8m x 4.8m).

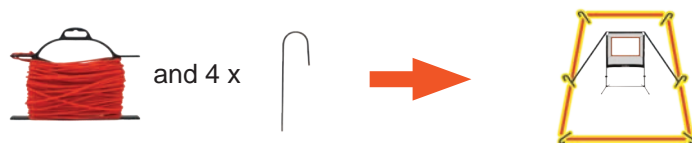

Use one of these:

wind birdie



yellow ball



or

red ball



Jazzminton is easy to learn

Practice and Learn Jazzminton Sport



Below are two steps to help you in your Jazzminton Sport journey.

FIRST STEP - Get comfortable with the birdies

Pass a birdie back and forth **without the Net** until you can rally easily.

Try to pass the birdie to the other player's paddle as close as you can, this trains you to direct the birdie where you want it to go.


Do this step until you feel comfortable and then move to the second step.




SECOND STEP

Pass the Sport Birdie back and forth **through the Window** until you can rally easily.

Once you are comfortable with this step, you can graduate to competitive games with score keeping.

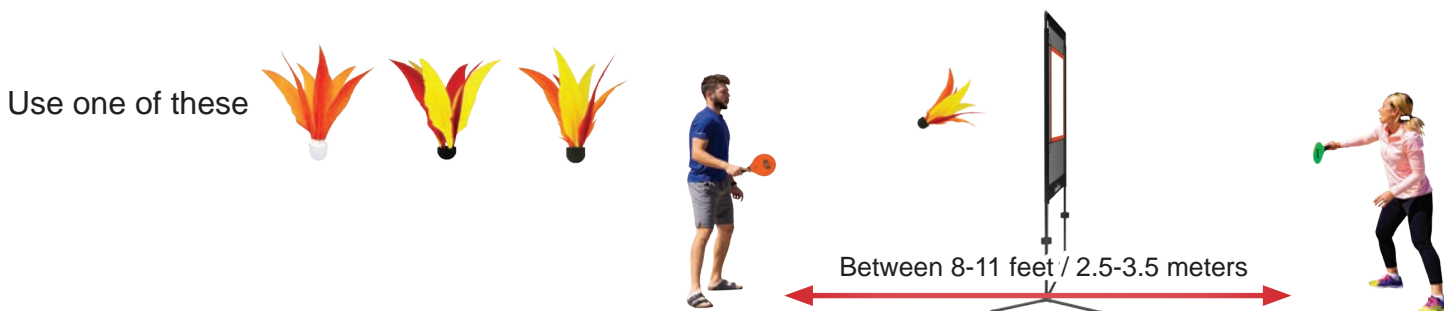


Birdie Comparison

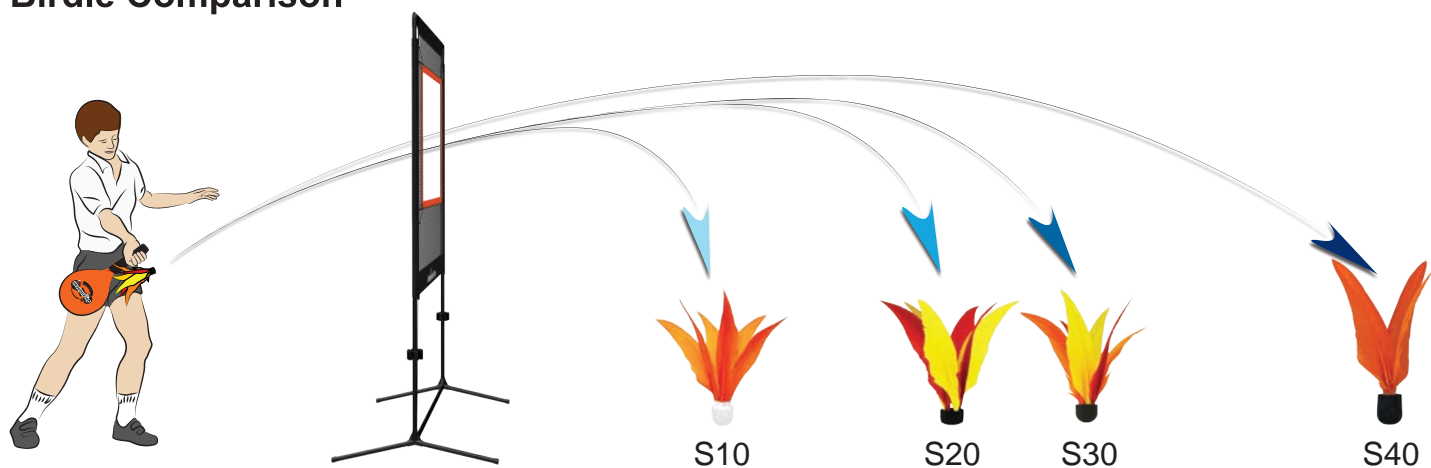


Jazzminton is easy to learn


How to hold paddle:

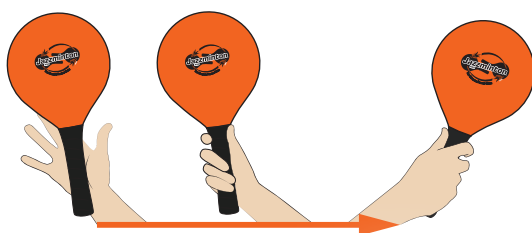


Underhand Serving

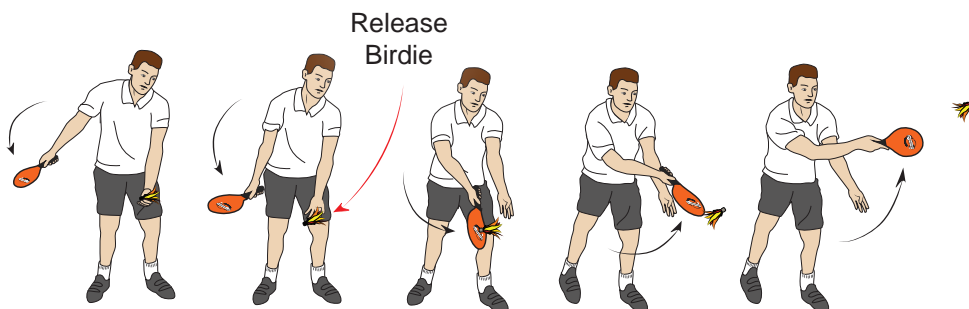


Forehand

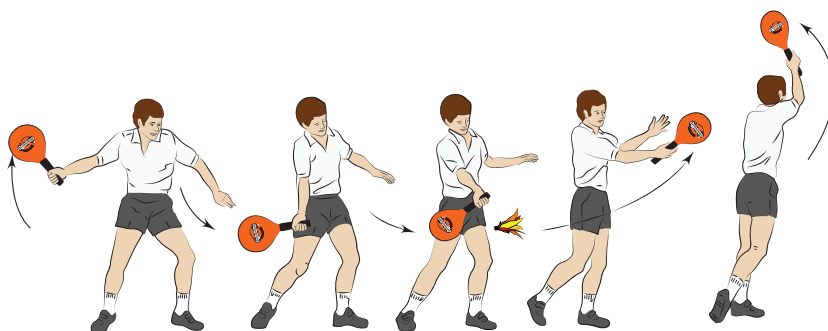

Backhand

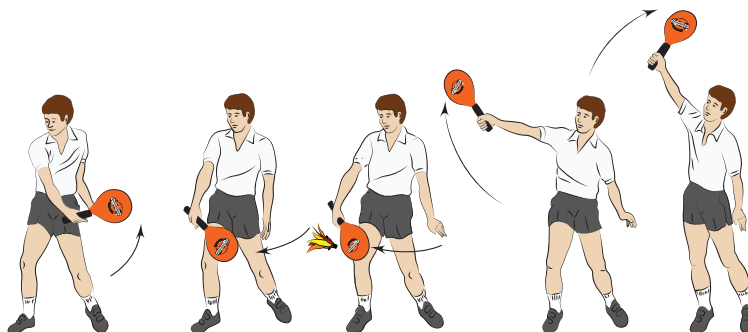

Smash

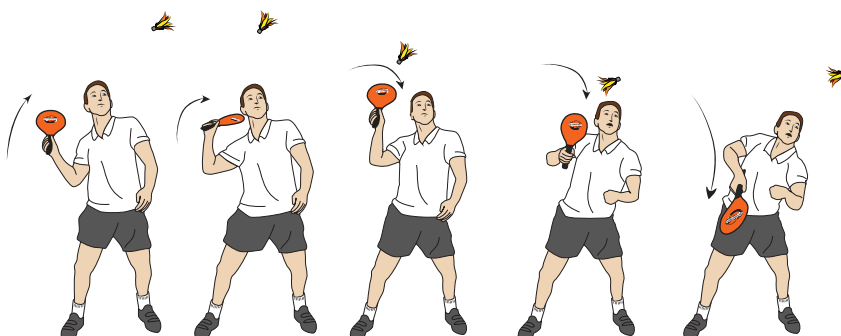

Rules

Objective: To win points by hitting a birdie/ball through the Jazzminton window until opponent cannot return it.

Determine Who Starts

Players rally, hitting the birdie/ball through the Jazzminton window, the winner of the rally gets the first serve.

Serving

Serving player is a minimum of 6 feet from the Jazzminton net and must underhand serve the birdie/ball. (See image). When serving, if the birdie/ball touches the net and goes through the window, it does not count and you must redo the serve. If it happens 2 times in a row, you lose the point.


Receiving player may stand at any desired distance.

Serve Alternating

If the game is to 11, each player alternates 2 serves at a time.

If the game is to 21, each player alternates 5 serves at a time.

If the score is 10-10 (played to 11 points) or 20-20 (played to 21 points), both players alternate one serve each until the game is won.

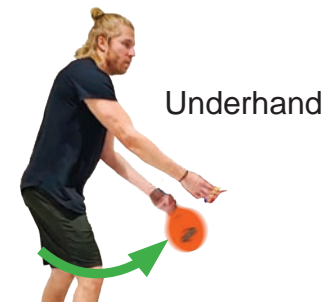

During Play

Using only your paddle you get one hit to return the birdie/ball through the window.

To equalize sun and wind effects, switch sides every 5 points, if desired.

Scoring

Jazzminton is played using rally scoring. Points can be won when serving or receiving. The rally ends and a point is awarded when the opponent cannot return the birdie/ball through the Jazzminton Window. If the birdie touches the net but still goes through the window, play continues as normal. (as long it was not on the serve)

Games are typically played to 11 or 21.

Games must be won by two points.

Alternative Scoring


You can only score when you are serving. (Traditional scoring, as in pickleball)

Schools and Gym

26 students can play at the same time.

Basketball court size of 92 x 50 feet (15 x 28m)

Each Jazzminton Court is 8 feet x 23 feet (2.5m x 7m)
(plenty of room around each group)

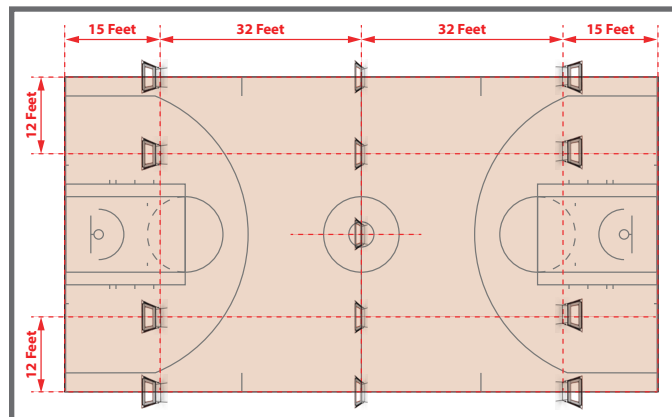

Storage

For quick storage, fold legs into foam holders.
Store it in a dry, room temperature environment.

To ensure your net lasts for years,
avoid leaving it in the sun or rain
when not in use.




Store in Carry Bag

Maintenance

Cleaning - you can clean all parts with a household glass cleaner.

If your birdie starts to look like this after playing:
(Keep in mind these are real goose feathers)

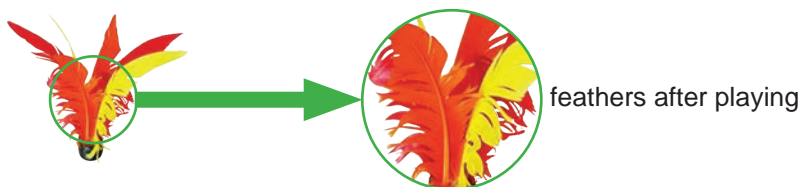

Place the feather between thumb and index finger and gently move outwards, one feather at a time.




For best results, use a tiny amount of hand cream or olive oil.

In case a feather falls out, you can use super glue to re-attach.

MORE

Sold Separately

Add-on: L-Shape Connector to lower net height

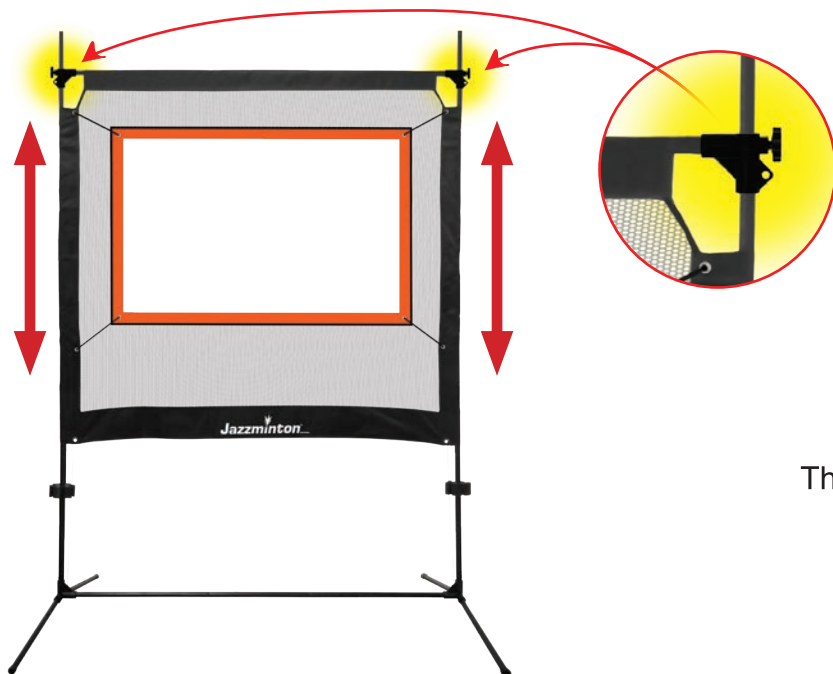

Add-on set comes with two of these L-Shape connectors.

These let you customize the net height to suit your gameplay preferences.



Replacement Birdies and Balls - Available Sets:

S10 Birdie  10 pack

S20 Birdie  10 pack

S30 Birdie  10 pack

S40 Birdie  10 pack

Mixed Birdies  3 pcs  3 pcs  3 pcs  3 pcs = 12 birdies

Yellow Ball  10 pack

Red Ball  10 pack



Packed like this



Contact us:



Replacement Birdies / Balls

Spare Birdies, Balls and Paddles:

funsparks.com/jazzminton-sport-birdies-balls

Or check your local specialty store

Spare Parts

Send us your request:

funsparks.com/jazzminton-sport-parts

Jazzminton Association

Sign up with Jazzminton Association and receive Jazzminton news and updates:

funsparks.com/jazzminton-sport-association

Schools and Charity Pricing

Please contact us through funsparks.com/pages/contact-us and

select School and Chartity Requests or call 888-898-3600 funsparks.com/jazzminton-sport-schools

Lesson Plan download funsparks.com/jazzminton-sport-lesson-plan

Support

Any technical question contact us through:

our real person live chat www.funsparks.com

info@funsparks.com

888-898-3600

funsparks.com/jazzminton-sport-support



Warranty

One year warranty for defects in

workmanship and materials: funsparks.com/jazzminton-sport-warranty

Register Your Warranty

funsparks.com/jazzminton-sport-warranty-register



319 Windward Island
Clearwater, FL 33767

Developed and Designed in the USA.

© Copyright All Rights Reserved by Funsparks LLC.
Patents Pending for Net and for Birdie
Funsparks and Jazzminton are registered Trademarks.
Made in Suzhou, China.